

How to get a printer config page – Sharp printers

Models: 314/264/354/363/453/503/623/753

Go to system settings

List print user

All custom setting list – touch print at right, 3 pages will print

Models: 904/1054/5111 Color

Go to settings - it is the icon at the lower part of the screen

System settings – it will be on left side of screen

List print user

All custom setting list – touch print at right, 3 pages will print

See start guide pages 7, 9, 10, 14-16.

Pages 26- 29 covers loading of the CD's that are left with the machines